

EMM.220 SERIES
Single Phase Two Wires Multifunction Din rail Meter



User Manual V2.1

Warnings

Important Safety Information is contained in the Maintenance section. Familiarize yourself with this information before attempting installation or other procedures.

- Risk of Danger:** These instructions contain important safety information. Read them before starting installation or servicing of the equipment.
- Caution:** Risk of Electric Shock

1.Introduction

This document provides operating, maintenance and installation instructions of EMM.220 series. The EMM220 series measure and display the characteristics of single phase two wires (1p2w) network. The EMM220 series covers 4 models:
EMM.220/EMM.220-Pulse/ EMM.220-MT/EMM.220-Mbus. The bi-directional measurements makes the meter suitable for active and reactive energy and power monitoring applications, and also perfect for solar PV measurements. With RS485 Modbus and M-bus port, the meter is easy to remote communication with other AMR/SCADA systems. Multi tariff function helps you to count the energy consumed in different time periods.

Model	Measurements	Communi-cation	Pulse Outputs	Multi Tariffs
EMM.220	U, I, P, Q, PF, Hz, Dmd, kWh, kVarh, Import, Export	RS485 Modbus	1: configurable 2: 1000imp/kwh	NO
EMM.220-Mbus	U, I, P, Q, PF, Hz, Dmd, kWh, kVarh, Import, Export	M-bus EN13757-3	1: configurable 2: 1000imp/kwh	NO
EMM.220-Pulse	U, I, P, Q, PF, Hz, Dmd, kWh, kVarh, Import, Export	NO	1: configurable 2: 1000imp/kwh	NO
EMM.220-MT	U, I, P, Q, PF, Hz, Dmd, kWh, kVarh, Import, Export	RS485 Modbus	1: configurable 2: 1000imp/kwh	4 Tariffs (RTC)

1.1 Key Characteristics

- Bi-directional measure and display
- Multi-function measurements
- Two Pulse outputs
- RS485 Modbus / M-bus
- 100A direct connection
- Two module size (35mm)
- Password protected set-up
- Backlighted LCD
- Multi-tariff

1.2 Pulse output

The meter provides two pulse outputs. Both pulse outputs are passive type.
Pulse output 1 can be set to generate pulses to represent total / import/export kWh or kVarh.
The pulse constant can be set to generate 1 pulse per: 0.001/0.01/0.1/1kWh/kVarh (default is 0.001 export kWh).
Pulse width: 200/100/60ms
Pulse output 2 is non-configurable. It is fixed up with active kwh (Imp). The constant is 1000imp/kWh.

1.3 RS 485 Serial Modbus RTU

Rs485 serial port with Modbus RTU protocol to provide a means of remotely monitoring and controlling the Unit.Set-up screens are provided for setting up the RS485 port.

1.4 Mbus for EMM.220-Mbus


This unit has an M-BUS serial port with M-BUS protocol to provide a means of remotely monitoring and controlling the Unit Set-up screens are provided for setting up the M-bus port.

1.5 4T by RTC for EMM.220-MT

The internal clock circuit of this unit has time automatic switching function. Calendar, clock and rate can be set and adjustment through RS485, infrared interface. At least 4 tariffs and 10 time segments can be set within a natural day.

2.Operation

2.1 LCD Display

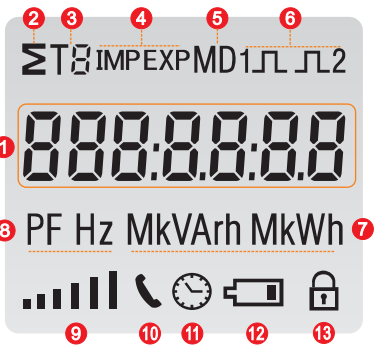

NO.	Descriptions
1	7 digits used to display measured values or RTC
2	Total value
3	Tariff information
4	Import information, Export information
5	Max. Demand for Power or Current.
6	Pulse output 1and Pulse output2
7	Measurement units
8	PF = power factor Hz = frequency
9	Bar display of Power
10	Communication indicator
11	Time information
12	Low battery warning
13	Lock symbol

2.2 Initialization Display

	All display segments light up, display check.
	Software version (please check the real software version on the product as the final).
	Modbus ID or Mbus Primary Address
	Mbus Secondary Address (High)
	Mbus Secondary Address (Low)
	Baud rate.
	Total kWh.

2.3 Scroll display by Buttons

After initialization and self-checking program, the meter display the measured values. The default page is total kWh. If the user wants to check other information, he needs to press the scroll button on the front panel.

The display order by scroll button :

***For EMM.220:**

Total kWh→ Import kWh→Export kWh→ total kVarh→ Import kVarh→ Export kVarh→ Max. Power Demand→ Voltage →Current→W→ Var →VA→ Power Factor → Frequency →Pulse Constant→ Modbus ID→ Baud Rate
Display No:1~3,8~10,15,20~29.

***For EMM.220-Pulse:**

Total kWh→ Import kWh→Export kWh→ Total kvarh→ Import kVarh→ Export kVarh→ Max. Power Demand→ Voltage →Current→W→ Var →VA→ Power Factor → Frequency →Pulse Constant
Display No: 1~3,8~10,15,20~27.

***For EMM.220-Mbus:**

Total kWh→ Import kWh→Export kWh→ Total kVarh→ Import kVarh→ Export kVarh→ Max. Power Demand→ Voltage →Current→W→ Var →VA→ Power Factor → Frequency →Pulse Constant→ Mbus Primary Address →Mbus Secondary Address→ Baud Rate
Display No:1~3,8~10,15,20~29.

***For EMM.220-MT:**

Total kWh→ Import kWh→ Export kWh→ T1 kWh→ T2 kWh→ T3 kWh→ T4 kWh→ Total kVarh→Import kVarh → Export kVarh→ T1 kVarh→ T2 kVarh→ T3 kVarh→ T4 kVarh → Max. Power Demand→ T1 Max. Power Demand →T2 Max. Power Demand→ T3 Max. Power Demand → T4 Max. Power Demand→ Voltage → Current→ W→ Var → VA→ Power Factor → Frequency → Pulse Constant→ Modbus ID→ Baud Rate → Date → Time→ Time Segment 1→ Time Segment 2→Time Segment 3 →Time Segment 4→Time Segment 5→Time Segment 6 →Time Segment 7→Time Segment 8→Time Segment 9 →Time Segment 10
Display No:1~41.

Scroll display by buttons:

No.	Picture	Descriptions
1		Total active energy Example:70.00kWh
2		Import(input) active energy Example: 50.00kWh
3		Export(output) active energy Example: 20.00kWh
4		T1 active energy Example: 10.00kWh
5		T2 active energy Example: 10.00kWh
6		T3 active energy Example: 30.00kWh
7		T4 active energy Example: 20.00kWh
8		Total reactive energy Example: 10.00kVarh
9		Import(input)reactive energy Example: 5.00kVarh
10		Export(output)reactive energy Example: 5.00kVarh
11		T1 reactive energy Example: 2.00kVarh
12		T2 reactive energy Example: 2.00kVarh
13		T3 reactive energy Example: 2.00kVarh
14		T4 reactive energy Example: 4.00kVarh
15		Max Power Demand Example: 6938W
16		T1 Max. Power Demand Example:0 W

17		T2 Max. Power Demand Example:0 W
18		T3 Max. Power Demand Example:0 W
19		T4 Max. Power Demand Example:0 W
20		Voltage Example: 229.8V
21		Current Example: 30.156A
22		Active Power Example: 4700W
23		Reactive Power Example: 1030Var
24		Apparent power Example: 4811VA
25		Power factor Example: 1.000
26		Frequency Example: 49.99Hz
27		Pulse 2 Constant Example: 1000
28		Modbus Address Example: 001 Mbus primary address Example:001
28-1		Low bit of MBUS Secondary address (Default 00 01 Example: if the Secondary address high bit is 0000, low bit is 0001,that means the integral Secondary address is 00 00 00 01
29		Baud rate Example: 9600
30		Date Format:Day,Month,Year Example: 1st,Jan,2015
31		Time Format:Hour,Minute.Second Example: 00:02:39
32		Time segment 1 Format:Hour:Minute,Tariff Example:00:00, Tariff 1
33		Time segment 2 Format:Hour:Minute,Tariff Example:02:00 Tariff 2

34	T3 04.00.03	Time segment 3 Format:Hour:Minute,Tariff Example:04:00 Tariff 3
35	T4 05.00.04	Time segment 4 Format:Hour:Minute,Tariff Example:05:00 Tariff 4
36	T5 07.25.01	Time segment 5 Format:Hour:Minute,Tariff Example:07:25 Tariff 1
37	T6 08.11.02	Time segment 6 Format:Hour:Minute,Tariff Example:08:11 Tariff 2
38	T7 15.40.03	Time segment 7 Format:Hour:Minute,Tariff Example:15:40 Tariff 3
39	T8 17.00.04	Time segment 8 Format:Hour:Minute,Tariff Example:17:00 Tariff 4
40	T9 19.00.01	Time segment 9 Format:Hour:Minute,Tariff Example:10:00 Tariff 1
41	T0 23.00.02	Time segment 10 Format:Hour:Minute,Tariff Example:23:00 Tariff 2

2.4 Set-up Mode

To get into Set-up Mode, the user needs to press the “Enter” button  for 3 seconds.

	Good	The setting is done correctly
	Err	The entering information is wrong. The operation fails.
1	PRAS0000	Password To get into Set-up mode, it asks a password confirmation. Default password: 1000
2	Add 001	Address For Modbus: Default ID is 001 Range: 001~247 For Mbus: Primary Address ID Default ID is 001 Range:001~250
2-1	Add 001	Press the “Enter” button, the first digit flash.Press the “Scroll” button to change the value. After choose the new address value, the user need pressing the “Enter” button to confirm the setting.
2-2	1dH0000	High bit of Mbus Secondary address(Default 00 00)
	1dL0001	Low bit of Mbus Secondary address(Default 00 01) Example: if the Secondary address high bit is 0000,low bit is 0001,that means the integral Secondary address is 00 00 00 01
2-3		Press the “Enter” button, the red part flash. Press the “Scroll” button to change the option. After choose the new value, the user need pressing the “Enter” button to confirm the setting.
3	bd 9600	Baud rate for Modbus Default value: 2400bps Range: 1200, 2400, 4800, 9600bps. Baud rate for Mbus: Default value: 2400bps Range:300, 600, 1200, 2400, 4800, 9600bps.
3-1	bd 9600	Press the “Enter” button, the red digit flash.Press the “Scroll” button to change the value. After choose the new baud rate, the user need pressing the “Enter” button to confirm the setting.

4	Prty N	Parity Default: None Option None, Even, Odd
4-1	Prty N	Press the “Enter” button, the red part flash. Press the “Scroll” button to change the option. After choose the new Parity, the user need pressing the “Enter” button to confirm the setting.
5	PLS out kWh	Pulse Output 1 Default: kWh Option:kWh / KVarh / Imp. kWh / Exp.kWh / Imp.kVarh / Exp.kVarh
5-1	PLS out kWh	Press the “Enter” button, the red part flash.Press the “Scroll” button to change the option. After choose the new Pulse output option, the user need pressing the “Enter” button to confirm the setting.
6	PLS cSt	Pulse Constant Default: 1000 Option: 1000 / 100 / 10 / 1
6-1	cSt 1000	Press the “Enter” button, the red part flash.Press the “Scroll” button to change the option. After choose the new Pulse constant option, the user need pressing the “Enter” button to confirm the setting.
7	PLS t	Pulse duration Default: 100mS Option: 200 / 100 / 60ms
7-1	PLSt 200	Press the “Enter” button, the red part flash.Press the “Scroll” button to change the option. After choose the new Pulse duration option, the user need pressing the “Enter” button to confirm the setting.
8	dIt SEt	Demand Integration Time Default: 15 minutes Option: off(0) / 5 / 10 / 15 / 30 / 60
8-1	dIt 15	Press the “Enter” button, the red part flash.Press the “Scroll” button to change the option. After choose the new DIT option, the user need pressing the “Enter” button to confirm the setting.
9	Scrl t	Automatic Scroll Time Interval Default: 0 S Option: 0 ~ 30S
9-1	t 30 S	Press the “Enter” button, the red part flash.Press the “Scroll” button to change the option. After choose the new “Scrl” option, the user needs to press the “Enter” button to confirm the setting.
10	SEtPASS	Password set-up Default: 1000
10-1	PRAS 1000	Press the “Enter” button, the red part flash.Press the “Scroll” button to change the option. After choose the new “Scrl” option, the user needs to press the “Enter” button to confirm the setting.
11	SEt dAtE	Date set-up Press the “Enter” button to enter the date set-up page.
11-1	01.01.00	Press the “Scroll” button to change the value. After choose the new value, the user need pressing the “Enter” button to confirm the setting. Date format:Day,Month,Year
12	SEt rTc	Time set-up Press the “Enter” button to enter the time set-up page
12-1	00.04.33	Press the “Scroll” button to change the value. After choose the new value, the user need pressing the “Enter” button to confirm the setting. Time format:Hour:Minute: Second

3.Specifications

3.1 Accuracy

Voltage	0.5% of range maximum
Current	0.5% of nominal
Frequency	0.2% of mid-frequency
Active power	1% of range maximum
Reactive power	1% of range maximum
Apparent power	1% of range maximum
Active energy	Class 1 IEC62053-21
	Class B EN50470-3
Reactive energy	1%of range maximum

3.2 General Specifications

Voltage AC (Un)	230V
Voltage Range	176~276V AC
Base Current (Ib/Iref)	5A
Max. Current (Imax)	100A
Mini Current (Imin)	0.25A
Starting current	0.4% of Ib/Iref
Power consumption	<2W/10VA
Frequency	50Hz(for MID version) 50/60Hz±2%(for non-MID version)
AC voltage withstand	4KV for 1 minute
Impulse voltage withstand	6KV-1.2uS waveform
Over current withstand	30Imax for 0.01s
Pulse 1 output rate	configurable, default 1000i/kWh
Pulse 2 output rate	non-configurable,1000i/kWh
Display	LCD with backlit
Max. Reading	99999.99kWh


3.3 Environment

Operating temperature	-25°C to +55°C
Storage/transportation temperature	-40°C to +70°C
Reference temperature	23°C ± 2°C
Relative humidity	0 to 95%, non-condensing
Installation category	CAT II
Mechanical Environment	M1
Electromagnetic environment	E2
Degree of pollution	2

*Maximum operating and storage temperatures are in the context of typical daily and seasonal variataion.

3.4 Pulse Output

The pulse output 1 can be set to generate pulses to represent total kWh, total kVarh,import kWh, export kWh,import kVarh, export kVarh.
Constant can be set to 1000/100/10/1 impulse per kWh or Kvarh.
Pulse width 200/100/60mS.



ATTENTION: Pulse output must be fed as shown in the wiring diagram below. Scrupulously respect polarities and the connection mode. Opto-coupler with potential-free SPST-NO Contact. Contact range:5~27VDC Max. current Input:27mA DC.

3.5 RS485 output for Modbus RTU

The meter provides a RS485 port for remote communication. Modbus RTU is the protocol applied. For Modbus RTU, the following RS485 communication parameters can be configured from the Set-up menu.
Baud rate: 1200, 2400, 4800, 9600 bps
Parity: NONE/EVEN/ODD
Stop bits: 1 or 2
Modbus Address: 1 to 247


3.6 Mbus

The meter provides a Mbus Port for remote communication. the meter adopts EN1434-3 Mbus communication protocol. The communication parameters can be configured via the SET-UP mode.
Baudrate: 300,600,1200,2400,4800,9600 bps
Parity: None/Odd/Even
Stop bit: 1 or 2
Primary address: 001~250
Secondary address: 00000001~99999999

3.7 Mechanics

Din rail dimensions	35x92x65 (WxHxD) Per DIN 43880
Mounting	DIN rail 35mm
Sealing	IP51 (indoor)
Material	self-extinguishing UL94V-1


4. Dimensions

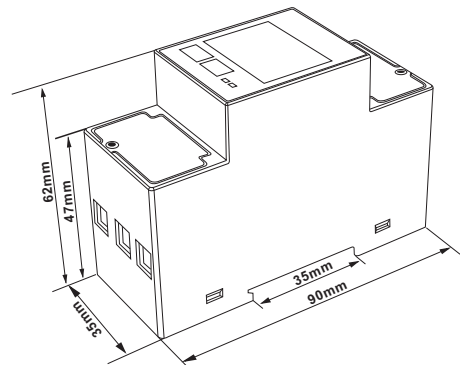

Declaration of Conformity(for the MID approved version meter only)


The fulfilment of the essential requirements set out in Annex I and in the relevant instrument-specific Annexes has been demonstrated.
We Qonnex bv, declare under our sole responsibility as the manufacturer that the poly phase multifuntion electrical meter “EMM.220” correspond to the production model described in the EU-type examination certificate and to the requirements of the Directive 2014/32/EU EC type examination certificate number 0120/SGS0360. Identification number of the NB0598 SGS Fimko Finland. The object described above is in conformity with the relevant Union harmonization legislation.

5.Installation and sealing

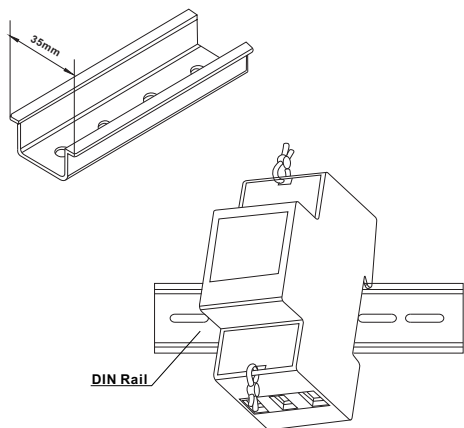


6.Wiring diagram


6.1 EMM.220 / MT

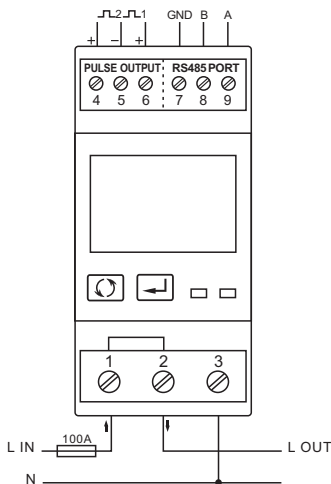

6.2 EMM.220-Pulse

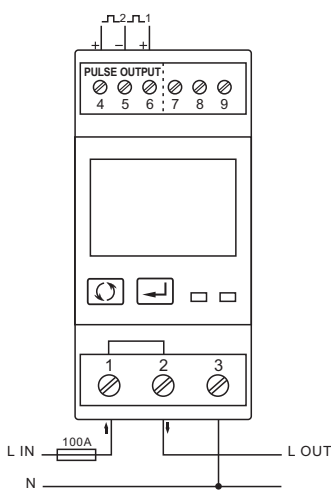

6.3 EMM.220-Mbus

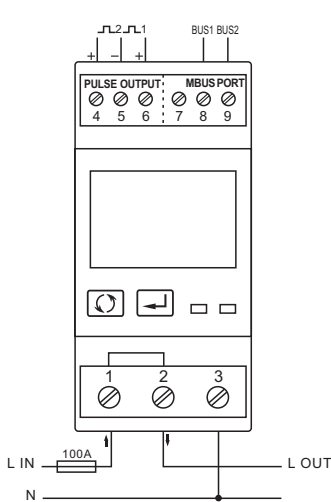

Qonnex bv
B-9310 Aalst, Belgium
Email: info@2-wire.be
www.2-wire.net

